



RELEASED
14-2-28

PPP

Part Number	D350-567-117	Box Part Number	BX20	Dimension	L x W x H 50 x 20 x 8
Description	Floor Window Installation, Extra Large	Other Packaging	Uline S4920		DT8439
		Logo Decals	D2728-1		

Packaging Instructions and Decal Placement

D350-567-117


*****Check the DT8439 template tube to make sure the template is inside.*****

Apply label D2729-4 to part number D3213-041**

Apply label D2729-4 & D2728-1 as per drawings below.


Put a piece of scrunched up bubble wrap on bottom of box. Put each kit in a big plastic bag and seal with Dart tape.

Check the DT8439 template tube to make sure the template is inside. Place window in first, then add template DT8439 down the side of the box. Add remaining parts &, paperwork. Add scrunched up bubble wrap to loose spaces to prevent any movement. Seal box and apply label D2729-3 as per instructions in QSI 014.

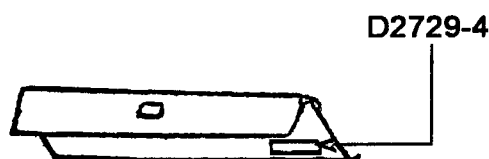

D3213-041 Door Assembly

(another view)

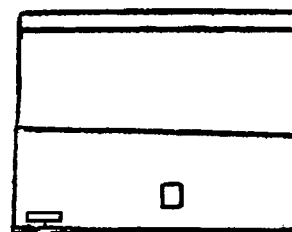

D2728-1

D2729-4

D2729-3

DART	
Part No.	N/A
P/N	D350-567-117
DESC.	Floor Window, Extra Large
QTY	BXXXXXX
Lot No.	AS350/355
DATE	CHG003
TIME	SH92-18
DATE	SH989NE
TIME	SH990NE



Dart Aerospace Ltd.
1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
CANADA
TEL: 1 613 632-5200

FLOOR WINDOW, EXTRA LARGE

P/N: D350-567-117

CHG003

B/N: BXXXXXX

Revision: E
Date: 16.04.20

DAS
16
9-89

2016/04/21